


ГАБАРИТНЫЙ ЧЕРТЕЖ

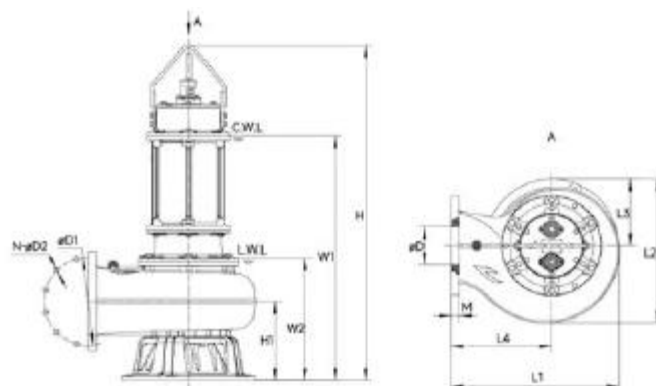

Модель	L1	L2	L3	L4	M	H	H1	W1	W2	ΦD	$\Phi D1$	N- $\Phi D2$
200WQ300-7-11/4	623	514	222	370	30	1176	260	818	416	200	295	8- $\Phi 23$
200WQ400-5-11/4	623	514	222	370	30	1176	260	818	416	200	295	8- $\Phi 23$
200WQ250-11-15/4	623	514	222	370	30	1221	260	863	416	200	295	8- $\Phi 23$
200WQ400-8-15/4	623	514	222	370	30	1221	260	863	416	200	295	8- $\Phi 23$
200WQ300-13-18.5/4	623	514	222	370	30	1256	260	898	416	200	295	8- $\Phi 23$
200WQ400-10-18.5/4	623	514	222	370	30	1256	260	898	416	200	295	8- $\Phi 23$
200WQ300-17-22/4	623	514	222	370	30	1256	260	898	416	200	295	8- $\Phi 23$
200WQ400-13-22/4	623	514	222	370	30	1256	260	898	416	200	295	8- $\Phi 23$
200WQ300-21-30/4	676	578	270	390	30	1240	270	895	380	200	295	8- $\Phi 22$
200WQ300-25-37/4	676	578	270	390	30	1295	270	890	380	200	295	8- $\Phi 22$
200WQ300-30-45/4	676	578	270	390	30	1295	270	930	380	200	295	8- $\Phi 22$